


Side-to-Side Straps

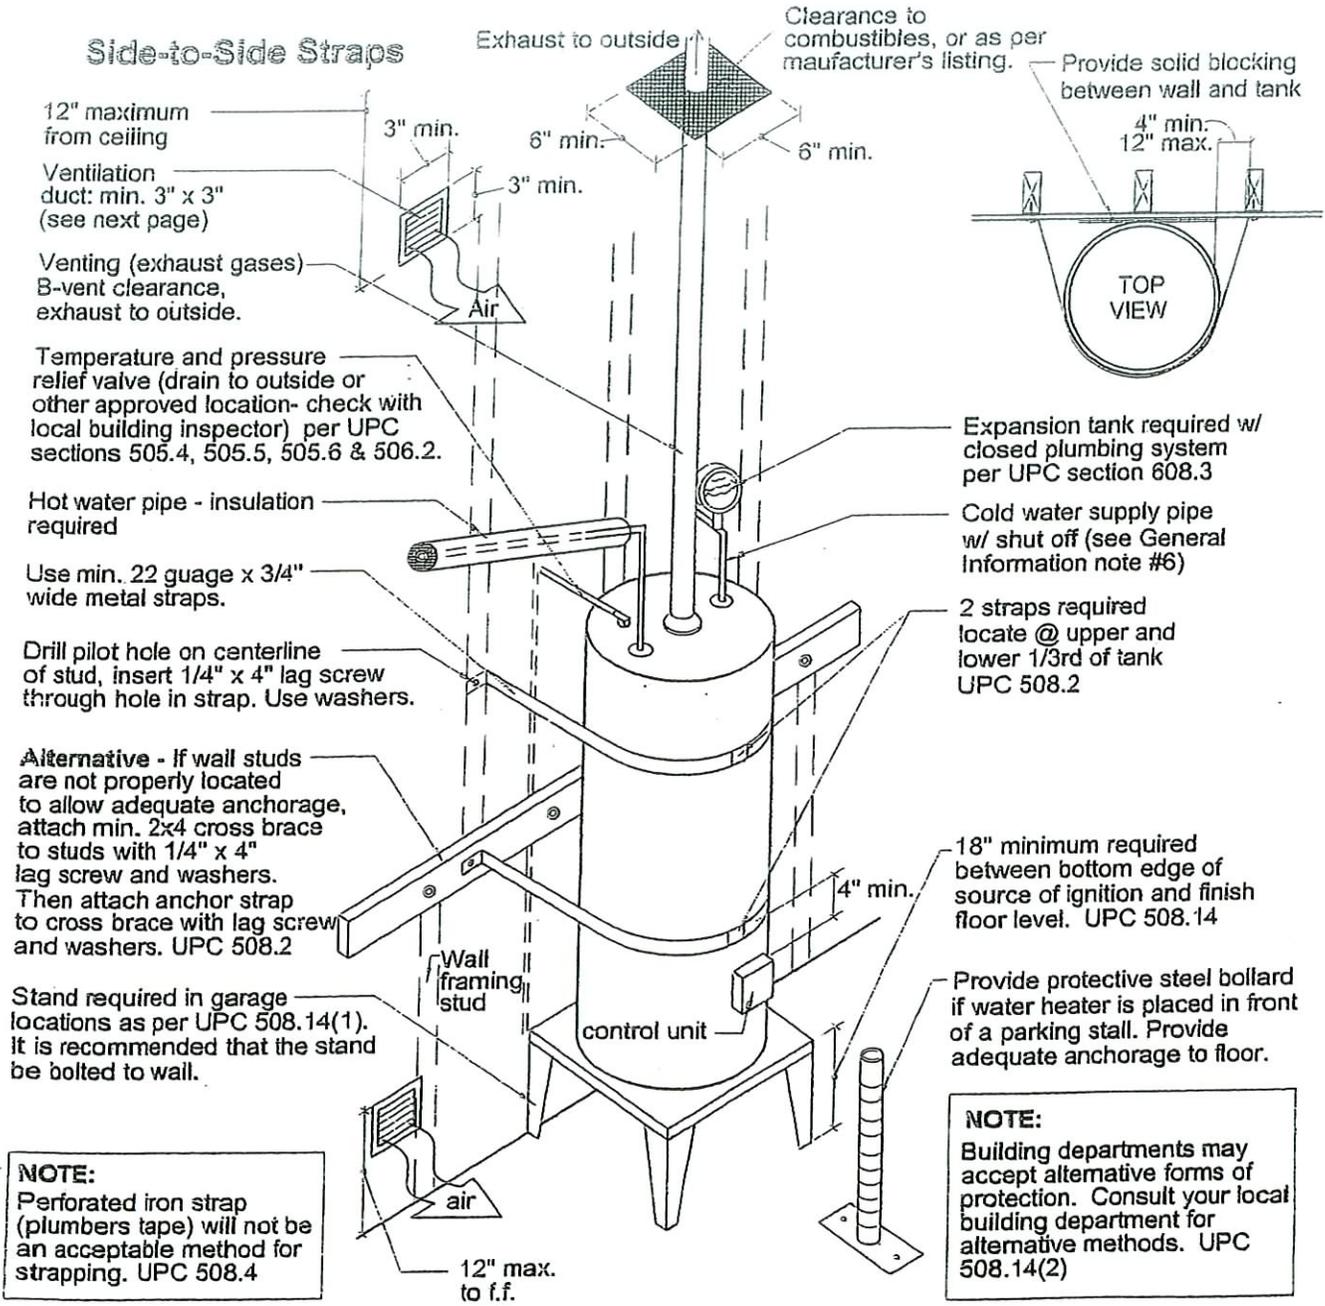

NOTE:
Perforated iron strap (plumbers tape) will not be an acceptable method for strapping. UPC 508.4

NOTE:
Building departments may accept alternative forms of protection. Consult your local building department for alternative methods. UPC 508.14(2)